



Home | Contact | Imprint | Terms and Conditions | Shopping Cart



Categories

- ▶ Microcontroller Modules
- ▶ SavvyBOX
- ▶ iDwaRF radio modules
- ▶ ToughSens Wireless
- ▶ ISP Programmer Adapter
- ▶ Tools and Utilities
- ▶ Accessories
- ▶ Software
- ▶ Customer Specific

Software

- ▶ chip45boot
- ▶ Portable WinAVR
- ▶ iDwaRF-Net Firmware

Newsletter

Stay informed on news and updates via email newsletter.

Email:

Search



Portable WinAVR

Portable WinAVR is based on the regular WinAVR suite of software development tools for the Atmel AVR microprocessor series and is preconfigured to run directly from any removable medium (e.g. USB memory stick) without prior installation.

Take your favorite AVR development environment to any PC with free USB port, take it to the lab's PC, where normally no WinAVR is installed, take it to a customer and perform software corrections in the field, evaluate a new WinAVR version prior to installing it permanently... etc.

Availability

Portable WinAVR is available as

- Ready-to-run USB memory stick with preloaded Portable WinAVR and sample projects
- Full ZIP archive with Portable WinAVR distribution (including WinAVR, supplementary files and samples projects)
- optional: ZIP archive with sample projects

Quick Start Guide

More detailed information on the Portable WinAVR distribution, package content, supplementary files and getting started is available here:

[Quick Start Guide zur Portable WinAVR Distribution.](#)

Download

Portable WinAVR full 20080610.7z	The WinAVR distribution 20080610 as portable version.
Portable WinAVR projects 060814.zip	Archive with sample projects for (Portable) WinAVR.

Products compatible with WinAVR and Portable WinAVR



[Atmel AVR microcontroller modules](#) with various interfaces and minimal size.



[Atmel AVR Microcontroller module with USB, RS232, RTC and sd-card header.](#)



[Atmel AVR ISP programmer adapter](#) for USB or parallel port. SKT500 compatible!



[programmable wireless radio modules for wireless sensor networks with free protocol stack.](#)



- Portable WinAVR Distribution.
- Runs directly from USB-sticks or other removable drives.
- No installation required.

[Back](#) [Home](#) [Contact](#) [Sitemap](#)